# Low-Temperature, Cut-Out Capillary Thermostats



NTF

#### **DESCRIPTION**

Electro-mechanical, low-temperature limit/cut-out thermostat with a 20 ft, 10 ft or 6 ft capillary sensing element, auto- or manual reset, and 1-SPDT or 2-SPDT switched output.

### **APPLICATION**

The thermostat and its capillary sensing element provide an antifreeze function. It detects temperature drops below a fixed safety value (setpoint), i.e. heaters in A/C units, exchangers in cooling systems, etc.

#### **FEATURES**

- Vapor-filled 20 ft, 10 ft or 6 ft copper capillary sensing element
- Joint spring protector at capillary-bellow connection
- Airtight single-stage switch, 1-SPDT or 2-SPDT contacts, 250 VAC, 15A
- · Auto- or manual reset
- Wide range, 14 to 54°F, fits water w/glycol added applications
- Setpoint safety-lock protection and simple adjustment
- Visual setpoint scale
- · Easy installation and wiring
- · Maintenance-free
- Two-year warranty



"Bulb on 6-ft capillary stores excess vapor (gas); still responds to the lowest temperature along any 1 ft. section of the entire capillary length."

### **SPECIFICATIONS**

- humidity

Thermostat Type Sensing	Self-contained, electromechanical
- element	Vapor-filled capillary
- media	Temperature in air
- operating range	14°F to 54°F (-10°C to 12°C)
- response	To lowest temperature sensed by any 1 ft section of the capillary element
Type of Control	
General	On/off, low-level single-stage or cut-out control, w/ (1) microswitch output
Low-level setpoint	
- factory set	At 39°F (4°C), and safety-lock secured
- adjustment	Over full operating range, via screwdriver slot
- visual scale	14°F to 54°F
Switch output	1-SPDT or 2-SPDT, airtight
<ul> <li>contact rating</li> </ul>	24250 VAC, 15 (8)A
- switching differential	1.8°F (1°K), auto- or manual reset
Environmental	
Permissible ambient	
<ul> <li>working temperature</li> </ul>	14°F to 54°F (-10°C to 12°C)
<ul><li>enclosure temperature</li><li>capillary overload</li></ul>	14°F to 131°F (-10°C to 55°C)
, ,	temperature 392°F (200°C), max. 60 min.
<ul> <li>storage temperature</li> </ul>	14°F to 158°F (-10°C to 70°C)

0 to 95% rH (rF), non-condensing

#### **Physical**

Enclosure (base and cover)

<ul> <li>base material</li> </ul>	Steel, galvanized	
<ul> <li>cover material</li> </ul>	ABS, fire retardant	
- color	Silver / light gray	
- protection	NEMA 1 (IP40)	

Capillary

- material Copper

Installation

- enclosure Surface mounted

- capillary Duct and across coil mounted

Dimensions (H x W x D)

- enclosure 3.3 x 4.1 x 2.1 in. (83 x 105 x 53 mm)

capillary

sensing element  $\varnothing$  0.08 in. (2 mm), various lengths:

20 ft (6 m), 10 ft (3 m), or 6 ft (1.8 m) (1) M20 compression fitting,

Cable entry (1) M20 compression fitting removable, hole fits 1/2 in.

conduit connector

Wire connection Terminal with wire-retaining

screws

Wire size Max. 14 AWG (2.5 mm²)

Weight 1.6 lbs. (0.7 kg) **Manufacturing** ISO 9001 certified

Approvals/Listings CE

Warranty Two-year material and

workmanship



right


#### ORDERING INFORMATION


Part Numbers	SPDT 15(8)A	Capillary Length ft (m)	Reset
NTF-3-US	1	6 (1.8)	Auto
NTF-3R-US	1	6 (1.8)	Manual
NTF-5-US	1	10 (3)	Auto
NTF-5R-US	1	10 (3)	Manual
NTF-1-US	1	20 (6)	Auto
NTF-1R-US	1	20 (6)	Manual
NTF-32-US	2 2	6 (1.8)	Auto
NTF-3R2-US		6 (1.8)	Manual
NTF-52-US	2	10 (3)	Auto
NTF-5R2-US	2	10 (3)	Manual
NTF-12-US	2	20 (6)	Auto
NTF-1R2-US	2	20 (6)	Manual
DBZ-05/0	Capillary mntg. clips, metal (6 pcs)		

### **INSTALLATION**

- Thermostat enclosure to be surface mounted; <u>avoid location</u> <u>subject to excessive vibration.</u>
- Allow unrestrictive access to the manual reset button (NTF-.R series).
- Mount to flat surface using oval holes only (see diagram).
   Mounting with round holes in middle of freezestat may damage the instrument and cause improper operation.
- Capillary sensing element to be located down the stream-side of a coil, exposed to all areas that encounter low temperature.
- Install capillary sensing element across the face of the coil, horizontally serpentine only.

## **DBZ-05/0** Accessory Capillary Mounting Clip Dimensions (mm)



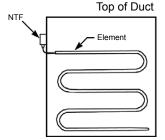

- <u>Do not kink or apply excessive force</u> to the capillary sensing element.
- Tie up the capillary element at appropriate points to prevent damage from air movement or vibration.



Thermostat enclosure <u>must not</u> be exposed to temperatures lower than the capillary element's sensing ability.

#### WIRING CONFIGURATION

#### NTF and NTF-.2

White Falling temperature and NC attained low cut-out setpoint, Blue NO contact connection: Red Red to Blue Common Vapor-filled capillary; control left responds to the lowest White NC temperature along any 1ft Blue section of the capillary length. NO Red Common White NC Blue NO Red □├─ Ground Common

- · All wiring should comply with national and electrical codes.
- All operations performed on the units, whether wiring, testing, or maintenance, must be done with neither power supply on the unit nor external load.
- For protection, enclosure cover must be installed, all screws to be fastened and cable entry secured.

### **OPERATION**

- The low cut-out setpoint is factory set and can be adjusted by turning the slotted screw on top of the enclosure.
- Auto-reset types will automatically switch back to the normal position if the temperature returns to normal conditions.
   Manual-reset types will switch back only if both the temperature returns to normal conditions and the reset button (at the enclosure's front) is manually pushed.

## **DIMENSIONS (mm)**

